

# ICS AERO



## Clip-On Extensions

Quick guide


**BMC**

# CLIP-ON EXTENSIONS

## PART LIST

Item Number: 30000749

| NUMBER | PART   |
|--------|--|
| 1      | LEFT Upper Clamp<br>Marked As "L" On The Inner Face  |
| 2      | LEFT Lower Clamp<br>Marked As "L" On The Inner Face  |
| 3      | LEFT Extension Body                                  |
| 4      | Extension Clamps                                     |
| 5      | M5 X 25 (incl 5x8.5mm Washer)                        |
| 6      | M4x12 (incl. 4x7mm Washer)                           |
| 7      | M4x20 (incl. 4x7mm Washer)                           |
| 8      | RIGHT Upper Clamp<br>Marked As "R" On The Inner Face |
| 9      | RIGHT Lower Clamp<br>Marked As "R" On The Inner Face |
| 10     | RIGHT Extension Body                                 |
| 11     | Assembly Guide (remove after assembly)               |
| 12     | Assembly Guide Bolts (M6 X 12)<br>And O-ring 5.6x1.8 |
| 13     | Arm Rests  |
| 14     | Arm Pads   |
| 15     | M6 Bolt M6 X12                                       |
| 16     | Carbon Extensions                                    |

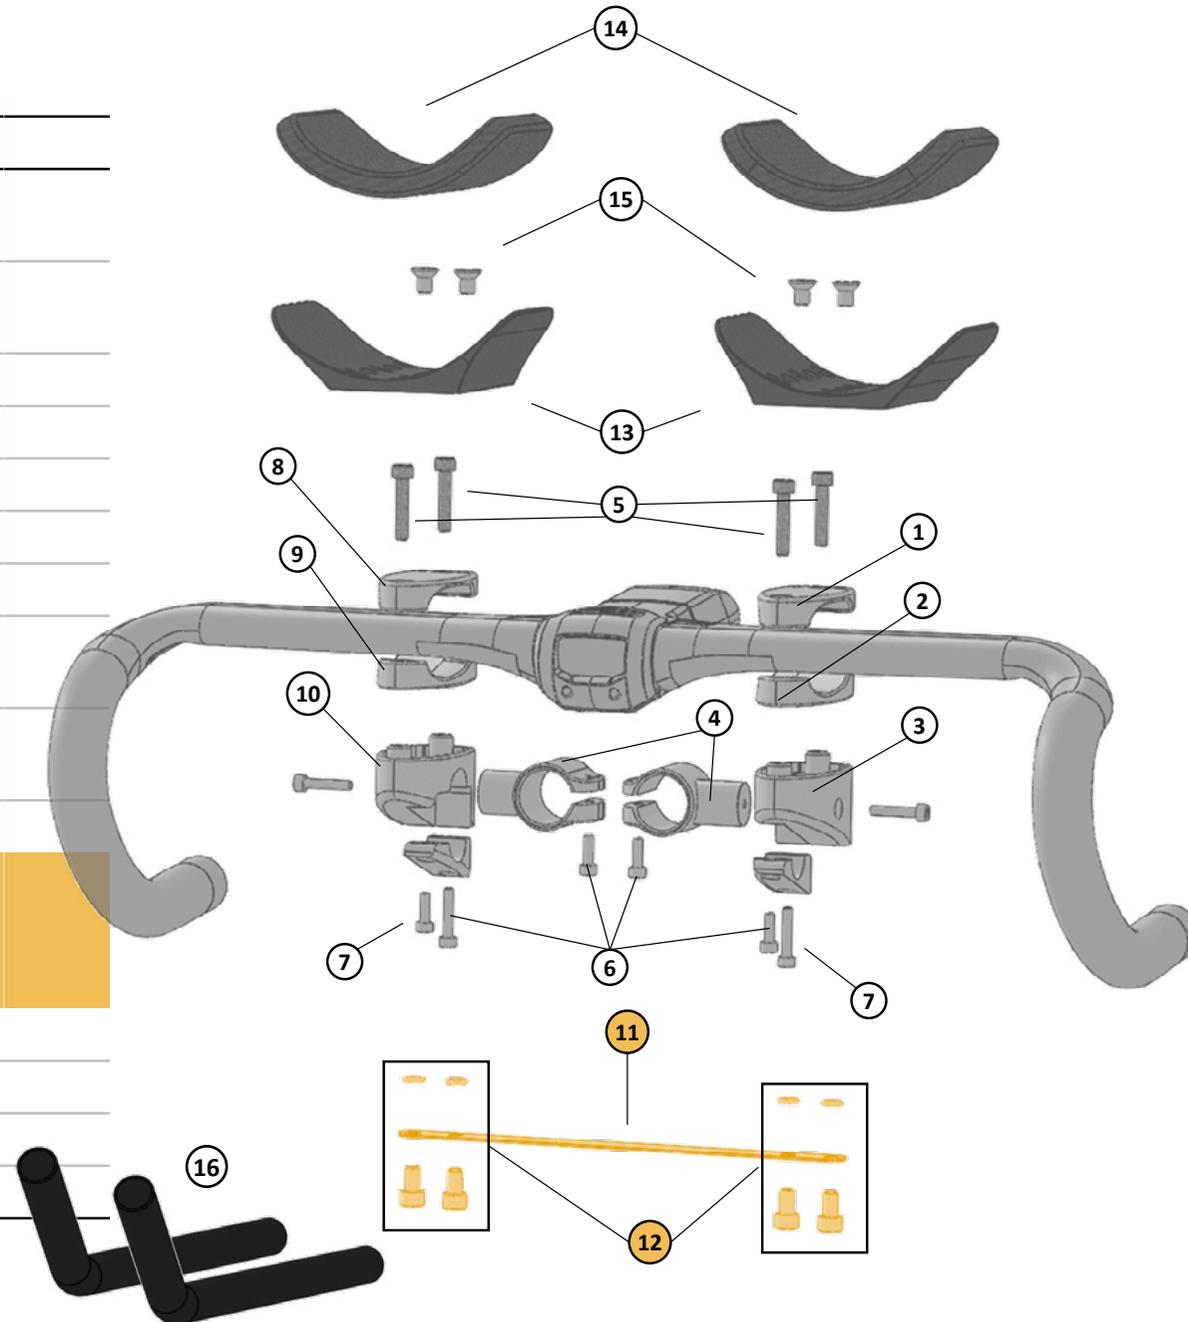

# MOUNTING OPTIONS

It is possible to mount the ICS Aero extensions in two different positions, reversing the position of the components:



## 1. LOW POSITION

The extensions are positioned below the handlebar

# MOUNTING OPTIONS




## 1. HIGH POSITION


The extensions are positioned above the handlebar

# EXPLODED VIEWS

### HIGH POSITION

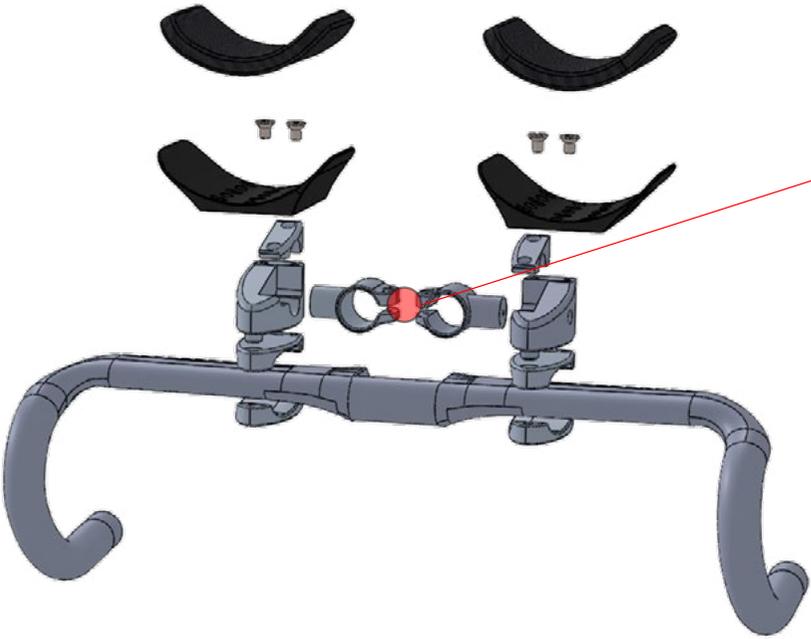

### LOW POSITION

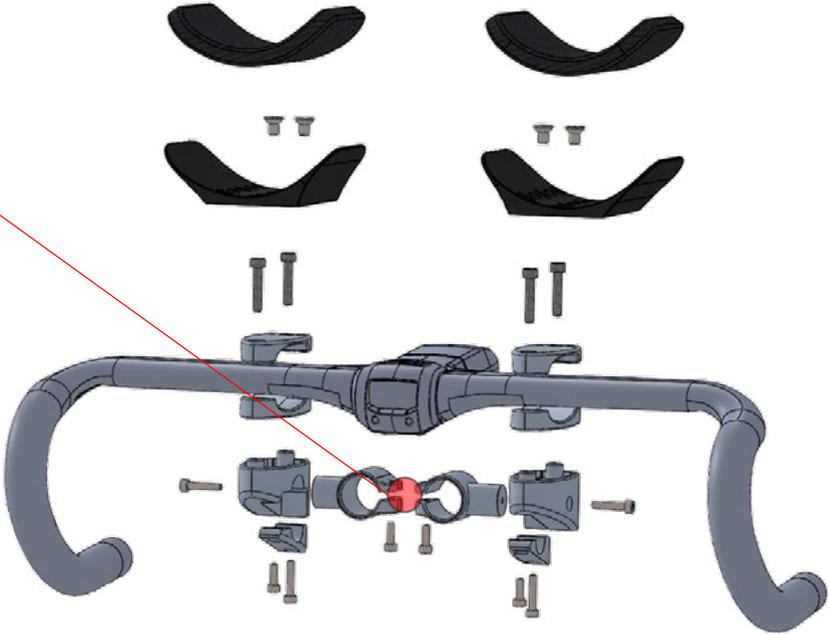

### IMPORTANT NOTE



Install the assembly guide to ensure the correct position of the tri extensions on the handlebar. The guide should be removed once the clip-on extensions are installed.



# INSTALLATION ON ICS AERO COCKPIT:


Use the notches on the assembly guide to ensure the correct positioning of the handlebar clamps.

The center-to-center distance between the extensions is set at 100mm.

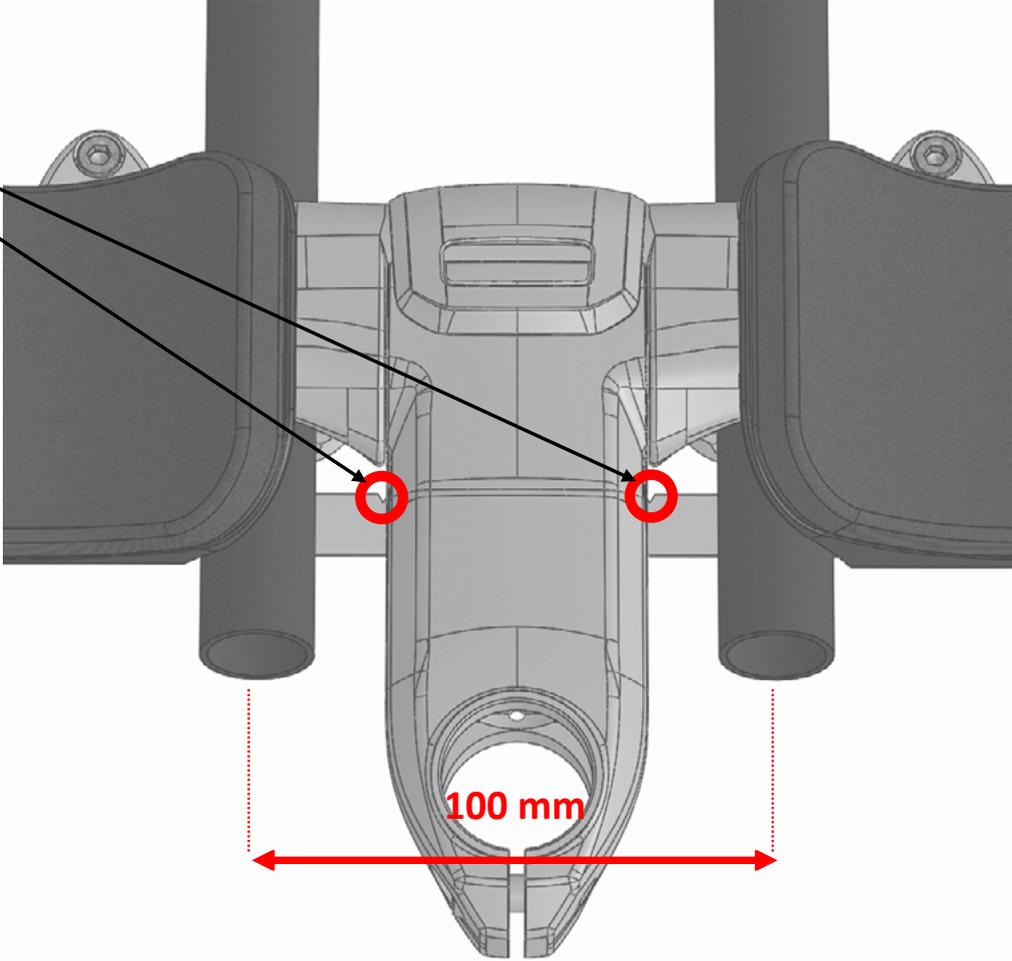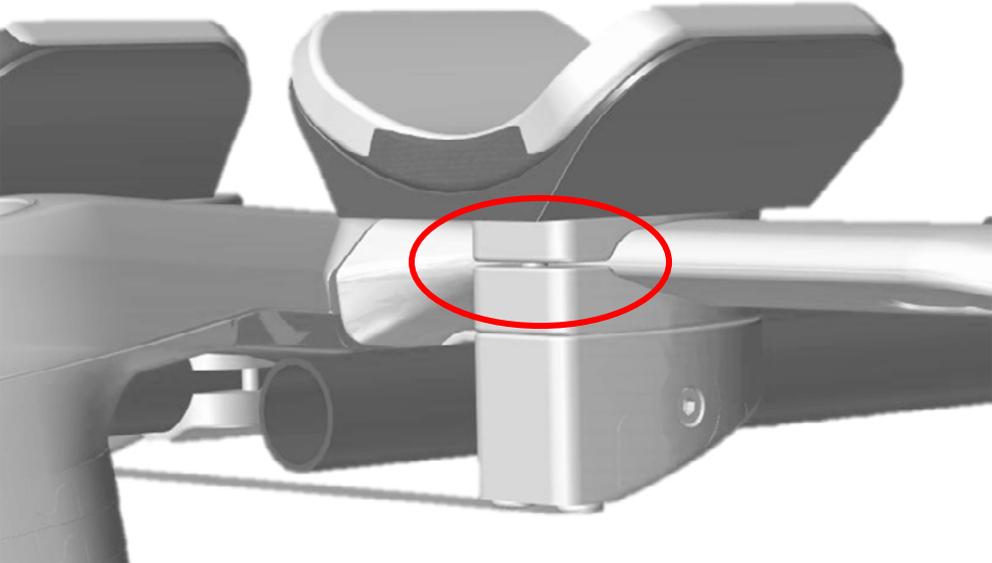


Please note that there is a gap in the clamp when correctly tightened (5 Nm).


Refer to the torque values displayed below when tightening the assembly:

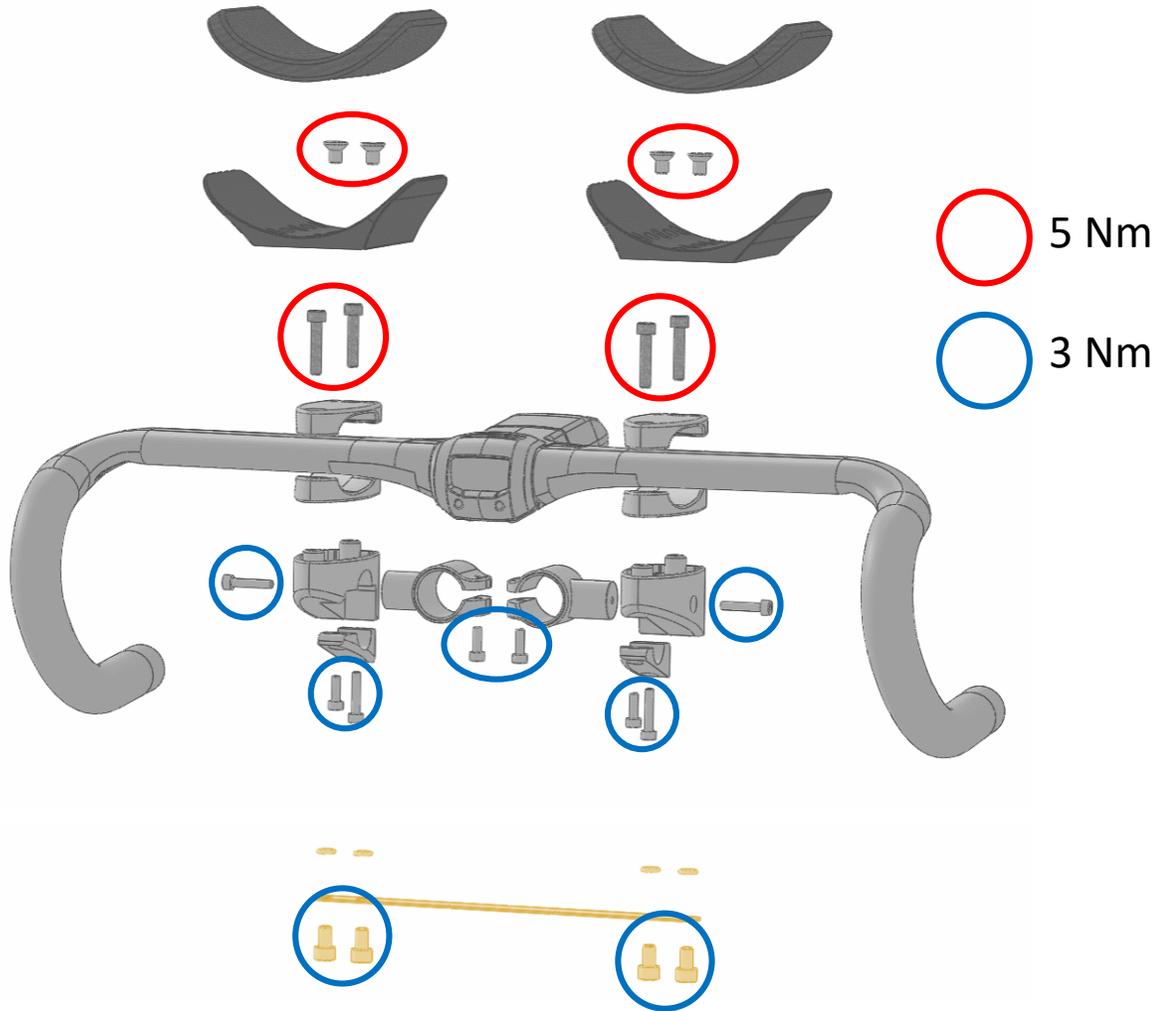

Apply grip paste on the extension clamp cylinders

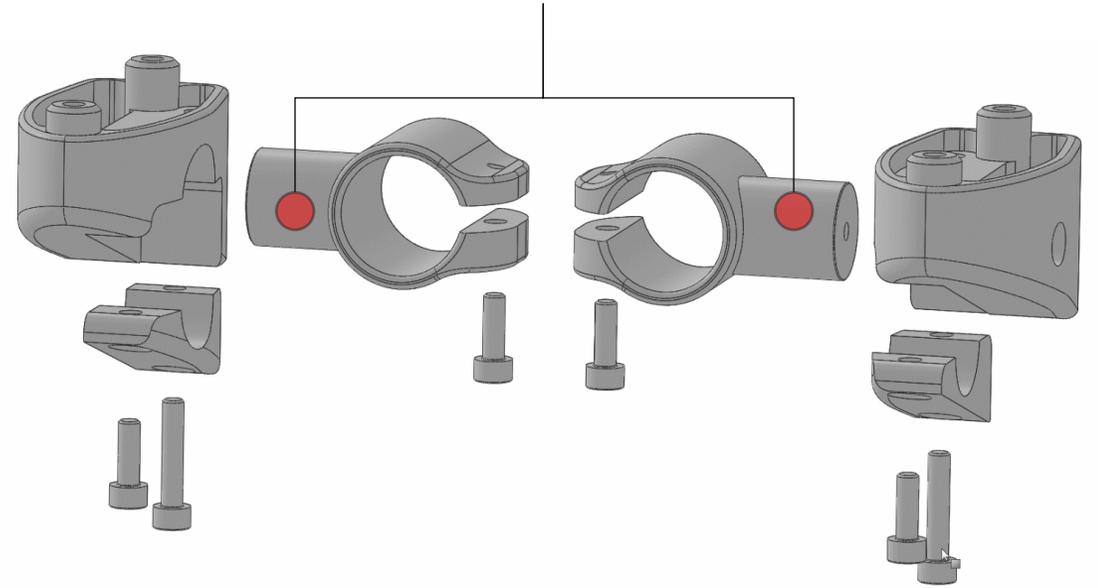


The arm rest position can be adjusted using different mounting holes

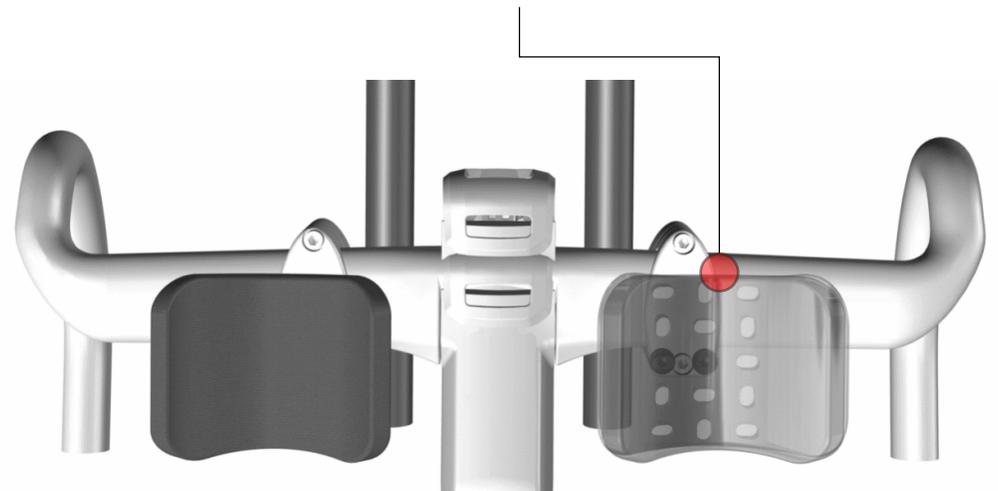

# INSTALLATION ON ICS AERO COCKPIT:

Apply grip paste on the extension clamp cylinders

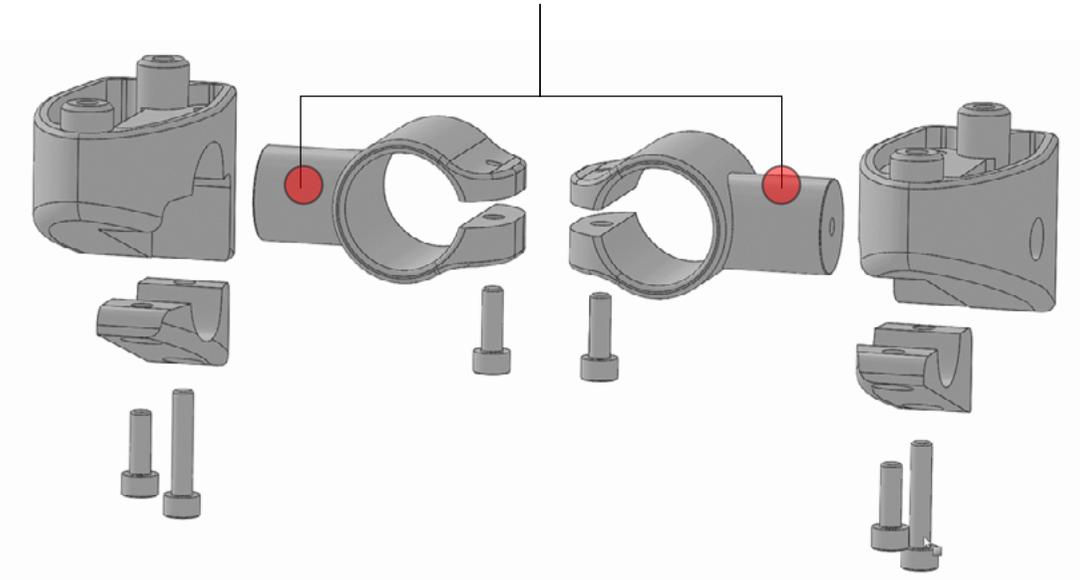

The arm rest position can be adjusted using different mounting holes

